



SMARTCUBE DUALBAR THERMOELECTRIC SC40T & GF27 MODEL SPECIFICATIONS

(Automated)












SmartCube Dualbar Model Specification



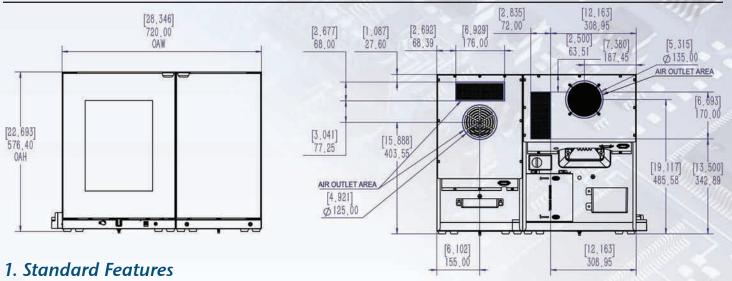

- Environmentally sustainable energy efficient thermoelectric cooling system
- Console Box (control module) can be serviced easily and located remotely
- Shelves use infrared sensors (no moving or mechanical parts)
- Plug-and-play cold cube shelving and door racks (no cables)
- NEW robust electronic lock with mechanical override feature
- Removable product dividers for easy cleaning
- Cyclopentane thermal foaming insulation (reduces ozone depletion)
- Reversible door hinging
- Magnetically sealed doors
- Internal LED lighting
- Automatic defrost
- Self-diagnostic reporting software
- ADA compliant

2. Technical Specifications


	SC-DulBar Thermoelectric
Part Number	SC-Dualbar
Cooling Type	Peltier Thermoelectric Superconductor 5 Heat Pipe
Capacity (liters / cubic feet)	67 / 2.36
Dimensions HxWxD (inches)* HxWxD (mm)*	22.92 x 28.465 x 18.7* 582.4 x 723 x 475*
Door Option	Full Glass Front: No Window, Full Window
Watts (W)	60W & 42-52W
Voltage (V)	110V / 60Hz 220V / 50Hz
Amps	0.5 & 0.35-0.75
Energy Consumption (kWh/24h)**	0.43 kWh/24h & 0.4 kWh/24h**
Net Weight (lbs / kgs)	73.63lbs / 33.4 kgs
Noise Level (dB)	40 dB
Certification	CSA/CE/FCC/ETL/WEEE/RoHS ISO 9001 and ISO 14001 certified

Full Glass Door Options





Customized silkscreening available including logo's

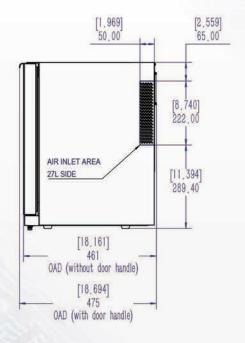

^{*} Measured to door handle

^{**}Average energy consumption per 24 hours, at 25°C (77°F) ambient temperature and 7°C (44.6°F) cooling temperature, in compliance with EN ISO 7371

SmartCube Dualbar Model Specification



3. SmartCube Sensor Shelf Configuration

SmartCube has interior sensor shelves for both the cold cube and the door. There are three possible shelf configurations for both the cold cube and the door. Please note that a sensor shelf is required in the top locations of the door and cold cube.

3.1 Door and Cold Cube Sensor Shelves








cold cube shelf

3.2 Customizable Door Racking Configurations

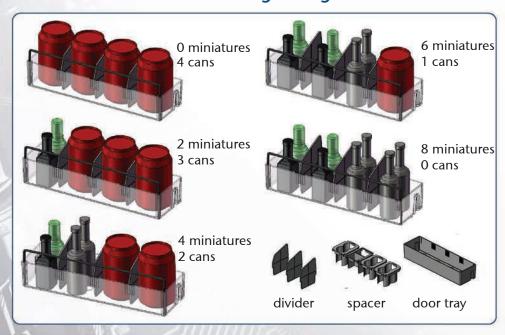

3.3 Shelf Dividers Prevent Guest Personal Use

- Designed to prevent storage of guests personal items
- Improved product placement and display











4. Plug-and-Play - No cable connection








5. Console Box (Control Module)

- Console Box contains all Printed Circuit Board Assemblies (PCBA's): mainboard, lock, bluetooth, & communication
- Flexible mounting options for ease of maintenance
- Wi-Fi module has an extension cable to achieve maximum signal connectivity
- Console Box easily replaced without troubleshooting individual PCBA's



5.1 Console Box Mounting Locations

Console Box can be mounted on the SmartCube, on the SmartTray or alternate location

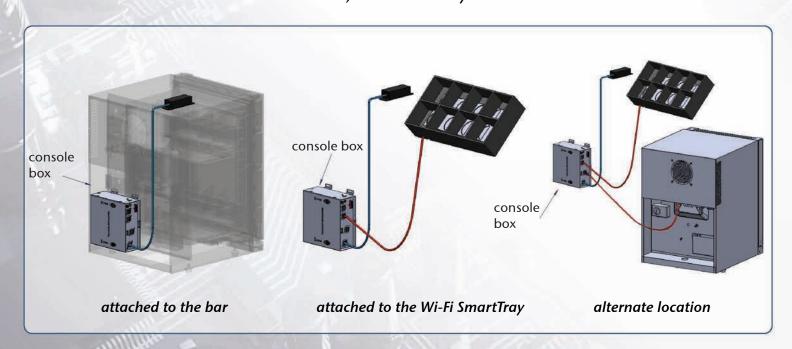

SmartCube Dualbar Model Specification



6. Ventilation - Basic Principles

Ventilation occurs by convection, which is the tendency of hot air to rise and colder air to sink. See recommendations in 6.1 through 6.4 on how to achieve proper ventilation.

Note: Proper ventilation and installation are required in order to not void SmartCube warranty.

6.1 Front Air Intake Ventilation (Toe Kick)

The inlet vent(s) must have a minimum open area of 61.72in² (39.81m²) to comply with specifications. This is based on a typical guest room environment of 77° F (25° C) with a relative humidity of no more than 65%. The inlet vent can be provided in any of the following configurations:

- i. A cut-out in the toe kick
- ii. A series of slots in the toe kick
- iii. A grill in the toe kick
- iv. An arched opening in the toe kick

Note: For optimal ventilation a door should not be installed in front of SmartCube.

6.2 Case Good Base Ventilation (Bottom Cut-Out)

The cabinet bottom is to be cut away directly behind and below the cooling unit. The shelf cut-out must have a minimum open area of 105.86in² (68.3m²). The easiest way to accomplish the required ventilation is to cut away across the complete width and extend the cut out back to the rear of the case good.

6.3 Case Good Side Ventilation (Side Vent)


Side inlets should be cut to a minimum open area of 54.25in²(35m²). It is recommended to have two side inlets but at a minimum of one inlet would be acceptable alternative.

6.4 Exhaust Ventilation (Grill or Back Vent)


- Back Exhaust ventilation (see Fig 6.1) Cut out in the back allowing trapped heat to escape.
- 2. Top Exhaust Ventilation (see Fig 6.4) Grill/Vent cut out on top for trapped heat to escape

Note: Ventilation from back requires a minimum 1.5in (38mm) air gap behind the case good for exhaust flow.


Front View Fig 6.1 & Back Ventilation Fig 6.4

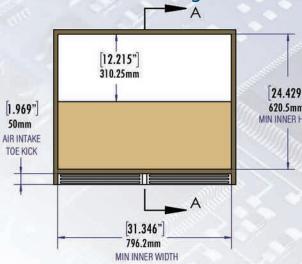

Bottom View Fig 6.2

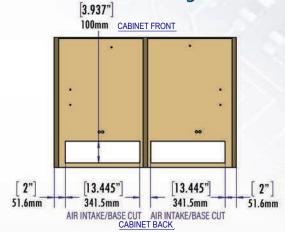

Side Section View Fig 6.3

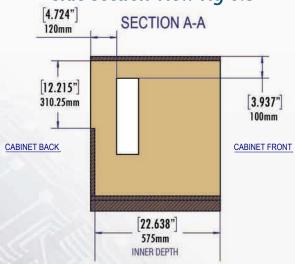

SmartCube Dualbar Model Specification




6.4 Exhaust Ventilation Continued

Exhaust ventilation is required in the case good to prevent warm air from being trapped in the top section causing the SmartCube to overheat. The exhaust vent(s) must have a minimum open area of 105.86in² (68.3m²) to comply with specifications (see Fig. 6.1). The exhaust vent(s) can be provided in any of the following configurations:


- A series of slots or a grill in the top
- ii. A series of slots or a grill in the back at the top
- iii. If the design will not permit the use of slots or a grill, the unit should be spaced 1.5" (38.1mm) from the wall to allow proper exhaust. Use spacers or stoppers to prevent the case good from being pushed up against the wall. In this configuration, the back of the case good must be cut away see Fig 6.1. The underside of the shelf above the SmartCube must be flat so that there are no obstruction to the airflow.

Top View Fig 6.4 (Optional Ventilation)

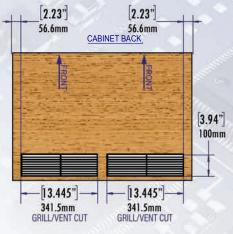

CABINET FRONT

The exhaust vent must exit into free space in the guest room. It must not vent into an enclosed space such as a closet, case good or ceiling void, as the heat will be trapped. The SmartCube must not be placed up against a heating radiator, window curtains or in direct sunlight. Ventilation grills or slots must not be covered. Please contact your Minibar Systems representative for review and certification of your case good design and drawings to ensure your design meets the SmartCube and SmartCube Case Good Specifications. If these ventilation requirements are not met, the warranty is void. The case good documents can be found on the SmartCube.MinibarSystems.com website or from your Minibar Systems representative.

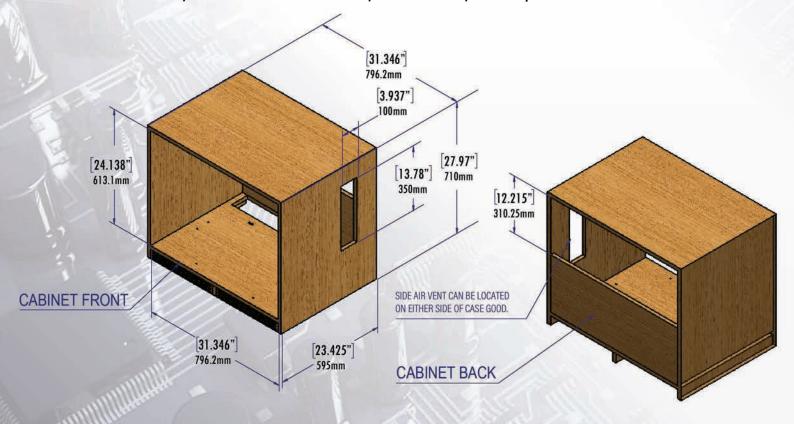







7. Ventilation and Cavity Requirements

Lateral cut-outs should line up with air intakes and air outlets.

Minimum Ventilation	Optimal Ventilation	Optional
- Toe Kick - Base Cut-Out - One Lateral Side Cut-Out - Back Cut-Out	- All Minimum Ventilation Requirements - 2nd Lateral Side Cut-Out - No Door	- Counter Top Vent (Only if a back cut-out is not available)

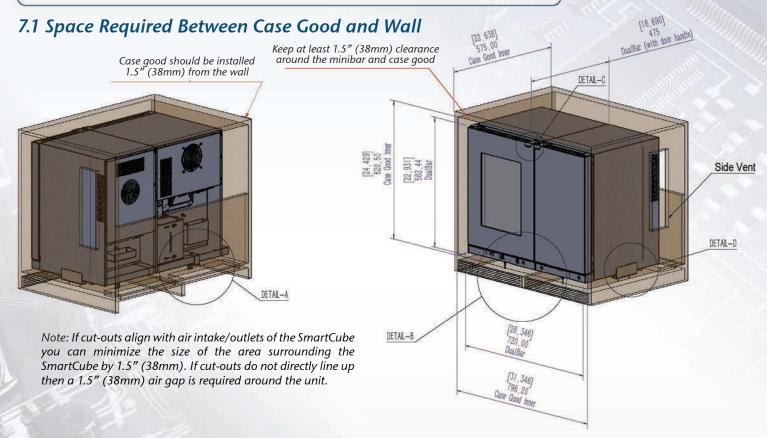

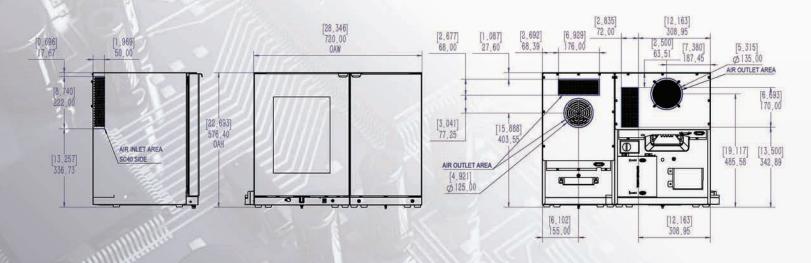







8. Installing Anti-Tilt Bracket and Securing to Case Good

SmartCube should be secured to case good using supplied hardware: 2 side brackets, anti-tilt bracket, and front mounting screw

8.1 Installing Anti-Tilt Bracket

Anti-tilt bracket should be mounted to bottom of case good using provided hardware and template.

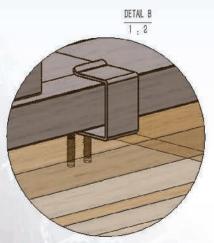

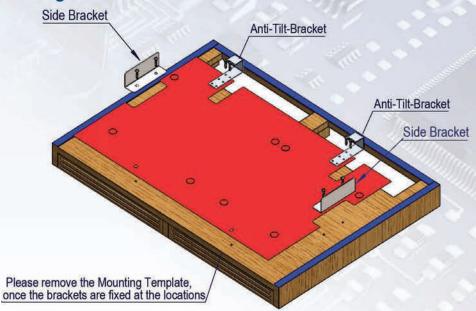

DualBar Mounting Template FRONT(FACING TO DOOR)

128 346

720.00 FRONT FIXATION FRONT FIXATION [8,071] 205.00 8.2 Mounting Side Bracket 32.74 [1,249] Side brackets should be mounted to case good [0.780] using provided hardware and template. 31.74 Side guide bracket cut-out DETAIL-D [6,102] 155,00 Side guide bracket cut-out **GUEST FRIDGE 27 SMARTCUBE 40** 0 00 [5.307] 134.79 100,49 BACK FIXATION BACK FIXATION [1,260] 32.00 B [16,299] 414,00 [12,205] [16,142] **BACK** Ø10.00

Thru hole Dia.










8.3 Installing & Anchoring SmartCube

SmartCube should be secured to case good from front using supplied hardware: front mounting screw

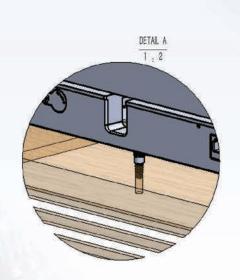

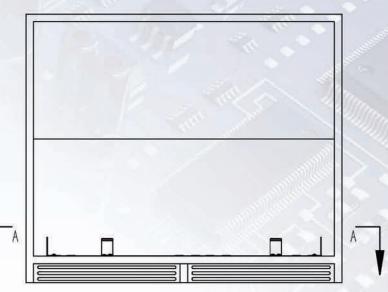

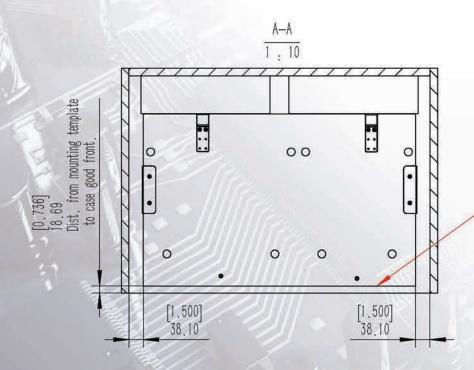

Template front needs to be flush to case good front if not using supplied SmartCube door handle





9. Guest Network Configuration





WiFi Guest Room Guest Room SmartCube SmartCube Refill Tablet



Standard

Encryption



Server Minimum Requirements		
Туре	Physical or Virtual	
Processor	Dual Core 3GHz or faster (x86 or x64)	
Memory	32GB Dedicated RAM	
Operating System	Windows Server 2019 R2 (64 bits), 2022	
Disk Space	500 GB minimum with redundancy (1TB recommended)	
SmartCube Connection	10/100/1000 Ethernet	
PMS Connection	10/100/1000 Ethernet or RS232	

Network Requirements		
SmartCube Communicat	ion	SmartCube Server on Static IP Address on Dedicated SmartCube VLAN
PMS commu	nication	SmartCube Server on a Static IP that is routed to the PMS Interface
Port	2	Purpose
10001	UDP	SmartCube bidirectional communication
12345	TCP	Handheld Unit (HTTPS)
54321	TCP	Handheld Unit (HTTPS)
443	TCP	SmartCube Attendant PC
67	UDP	DHCP
68	UDP	DHCP

Interface

SSID	Hidden SSID with Password	
Signal	-65dBm or better at the SmartCube location	
	Tablet Specifications	
Operating System	Android Version 7.1 (Nougat) or Later	
Communication	Bluetooth & WiFi	
Memory	16 GB	
Tablet Communications		
Bluetooth 🔻	Used to connect tablet to SmartCube to perform refills	
Wifi 🛜	Used to sync refills from server to tablet	

SmartCube Client/Workstation Specifications	
Processor	2.4 GHz or faster (x86 or x64)
Memory	2GB Dedicated RAM
Ethernet	10/100 Fast Ethernet
Operating System	Windows 10 or higher
Browser	Chrome

WiFi Specifications

802.11 b,g,n 2.4Ghz

WPA / WPA2-PSK

PMS Interface Required SmartCube / Robobar / AutoClassic





10. Administrative Network Configuration











Server Minimum Requirements		
Туре	Physical or Virtual	
Processor	Dual Core 3GHz or faster (x86 or x64)	
Memory	32GB Dedicated RAM	
Operating System	Windows Server 2019 R2 (64 bits), 2022	
Disk Space	500 GB minimum with redundancy (1TB recommended)	
SmartCube Connection	10/100/1000 Ethernet	
PMS Connection	10/100/1000 Ethernet or RS232	

	Network Requirements		
SmartCube Communication		SmartCube Server on Static IP Address on Dedicated SmartCube VLAN	
PMS commi	unication	PMS to provide static IP address and port number required to configure PMS interface integration	
Port		Purpose	
10001	UDP	SmartCube bidirectional communication	
12345	TCP	Handheld Unit (HTTPS)	
54321	TCP	Handheld Unit (HTTPS)	
443	TCP	SmartCube Attendant PC	
67	UDP	DHCP	
68	UDP	DHCP	

Interface	
PMS Interface Required	SmartCube / Robobar / AutoClassic

	WiFi Specifications
Standard	802.11 b,g,n 2.4Ghz
Encryption	WPA / WPA2-PSK
SSID	Hidden SSID with Password
Signal	-65dBm or better at the SmartCube location

Tablet Specifications	
Operating System	Android Version 7.1 (Nougat) or Later
Communication	Bluetooth & WiFi
Memory	16 GB

Tablet Communications	
Bluetooth 🔻	Used to connect tablet to SmartCube to perform refills
Wifi 🛜	Used to sync refills from server to tablet

SmartCube Client/Workstation Specifications	
Processor	2.4 GHz or faster (x86 or x64)
Memory	2GB Dedicated RAM
Ethernet	10/100 Fast Ethernet
Operating System	Windows 10 or higher
Browser	Chrome